



# Moulding D E C O R

THESE MOULDINGS ARE 100% PAINTABLE








## Available in : 2.44 meters ( 8 ft )

FW-100 16mm FW-101 22mm FW-102 30mm

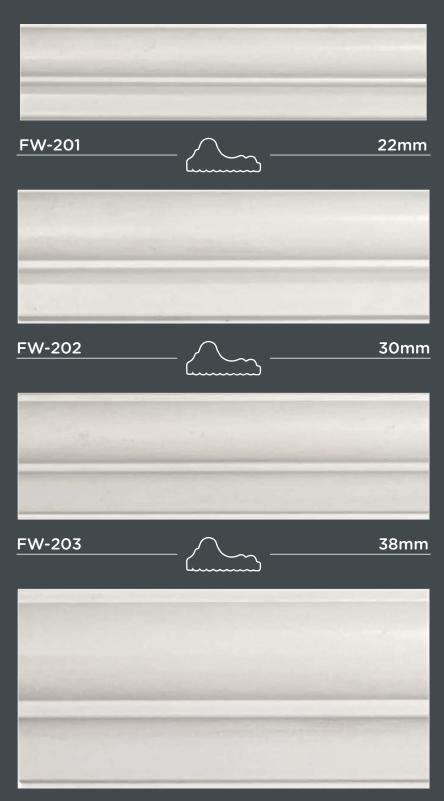





FW-205



65mm

#### -INSTALLATION-

#### **Step-1** → Prepare the Surface

Cleam the wall surface. Ensure the well is smooth and free from imperfections. Measure and mark the placement of the moulding on the wall.


#### Step-2 ➤ Cut & Fit the moulding

Measure and cut the moulding at a 45-degree angle. Dry-fit the moulding piece together. Apply construction adhesive along the back of the moulding.

### Step-3 Install & Secure the moulding

Position the mouldinhg on the wall using the guidlines. Secure the moulding with adhesive or headless nails. Fill nail holes or gaps with wood filter or putty. Sand the filled areas for a smooth surface. Paint or finish the moulding.



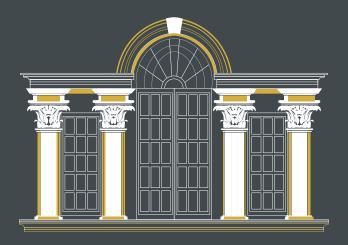



















#### **Subham Decor**

3565, Rasulgarh, Bhubaneswar, 75101, Odisha Ph: +91 99372 44000 Follow us on.





